


P/3M-Set

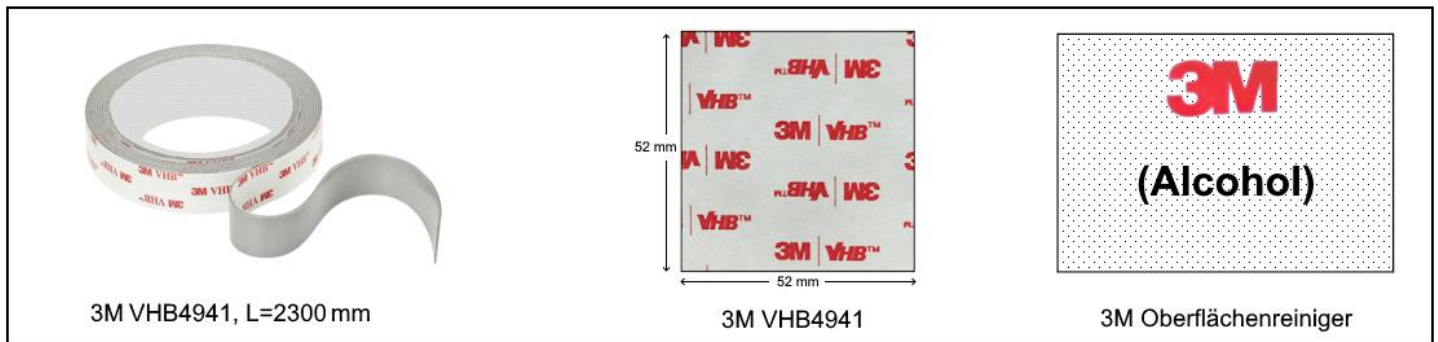

Wandprofil-Duschkabinen mit 3M Hochleistungsklebertechnik statt Bohren

Mit dem P/3M-Set können Wandprofile P/WKP für Festwände (bis 150 cm Breite) und Festteile (20 – 75 cm Breite) für Türen (bis Türbreite 75 cm = max. Gesamtbreite 150 cm) geklebt werden, maximale Höhe 230 cm. Es kann nur auf feste, glatte Fliesen geklebt werden, die eben und nicht bauchend verlegt sowie fettfrei, trocken und sauber sind. Die Profile müssen vollflächig und senkrecht verklebt werden. (Nicht auf senkrechte Fugen kleben.) Im Zweifelsfall ist immer die reguläre Montage (Bohren) zu wählen, UX-Dübel und Schrauben liegen den Wandprofilen immer bei. Schiefe Wände bis zu 10 mm können mit der Wandverstellung im Profil ausgeglichen werden (siehe reguläre Montageanleitung). Es muss immer ein Glas-Stabilisationsarm zur Wand verwendet werden, der möglichst weit vorne oben am Glas angebracht wird (Klebesockelplatte G/SWP für Wand).

Verwenden Sie diese Anleitung ergänzend zur regulären Montageanleitung:

1. Anreißen der Außenkante Wandprofil (Glasaußenkante + 4 mm) und Reinigen des Klebebereichs mit 3M Oberflächenreiniger (Alkohol).
2. Aufkleben des 3M VHB4941 Klebebandes auf gereinigte Rückseite Wandprofil P/WKP mit Andruckrolle o. Ä. Dann Profil von unten ansetzen, entlang des Außenkanten-Risses an Wand kleben und Schutzabdeckung (Liner) des Klebebandes dabei nach oben abziehen.
3. Wandprofile fest auf ganzer Höhe andrücken (20 N/cm²). Hinweis: Endklebekraft wird bei 20° C nach 72 h erreicht. Wandprofile rundum zur Wand absilikonieren und alle Gläser zum Boden absilikonieren.

Beachten Sie auch die 3M Produktinformationen.

Wall Profile Shower Enclosures with 3M High-Performance Adhesive Technology (No Drilling)


The P/3M set is suitable for bonding wall profiles P/WKP for fixed panels up to 150 cm width and fixed panels from 20–75 cm width with doors up to 75 cm door width (max. total width 150 cm), up to a maximum height of 230 cm. Bonding is only permitted on solid, smooth tiles that are installed level (not bowed) and are clean, dry and free of grease. The wall profiles must be bonded over their full surface and installed vertically.

Do not bond on vertical grout joints. If in doubt, always use the standard installation method (drilling). Wall plugs and screws are supplied with the wall profiles. Uneven walls up to 10 mm can be compensated using the wall adjustment in the profile (see standard installation instructions). A glass stabilizer bar to the wall must always be installed and positioned as far forward and as high as possible on the glass (adhesive base plate G/SWP for wall).

Use these instructions as a supplement to the standard installation instructions:

1. Mark the outer edge of the wall profile (outer glass edge + 4 mm) and clean the bonding area using 3M surface cleaner (alcohol).
2. Apply 3M VHB 4941 adhesive tape to the cleaned rear side of wall profile P/WKP using a pressure roller or similar tool. Position the profile from the bottom, bond it to the wall along the marked line and simultaneously remove the protective liner upwards.
3. Press the wall profiles firmly against the wall over their full height (20 N/cm²). **Note:** Final adhesive strength is achieved after 72 hours at 20 °C. Seal the wall profiles completely to the wall with silicone and seal all glass panels to the floor.

Please also observe the 3M product information.

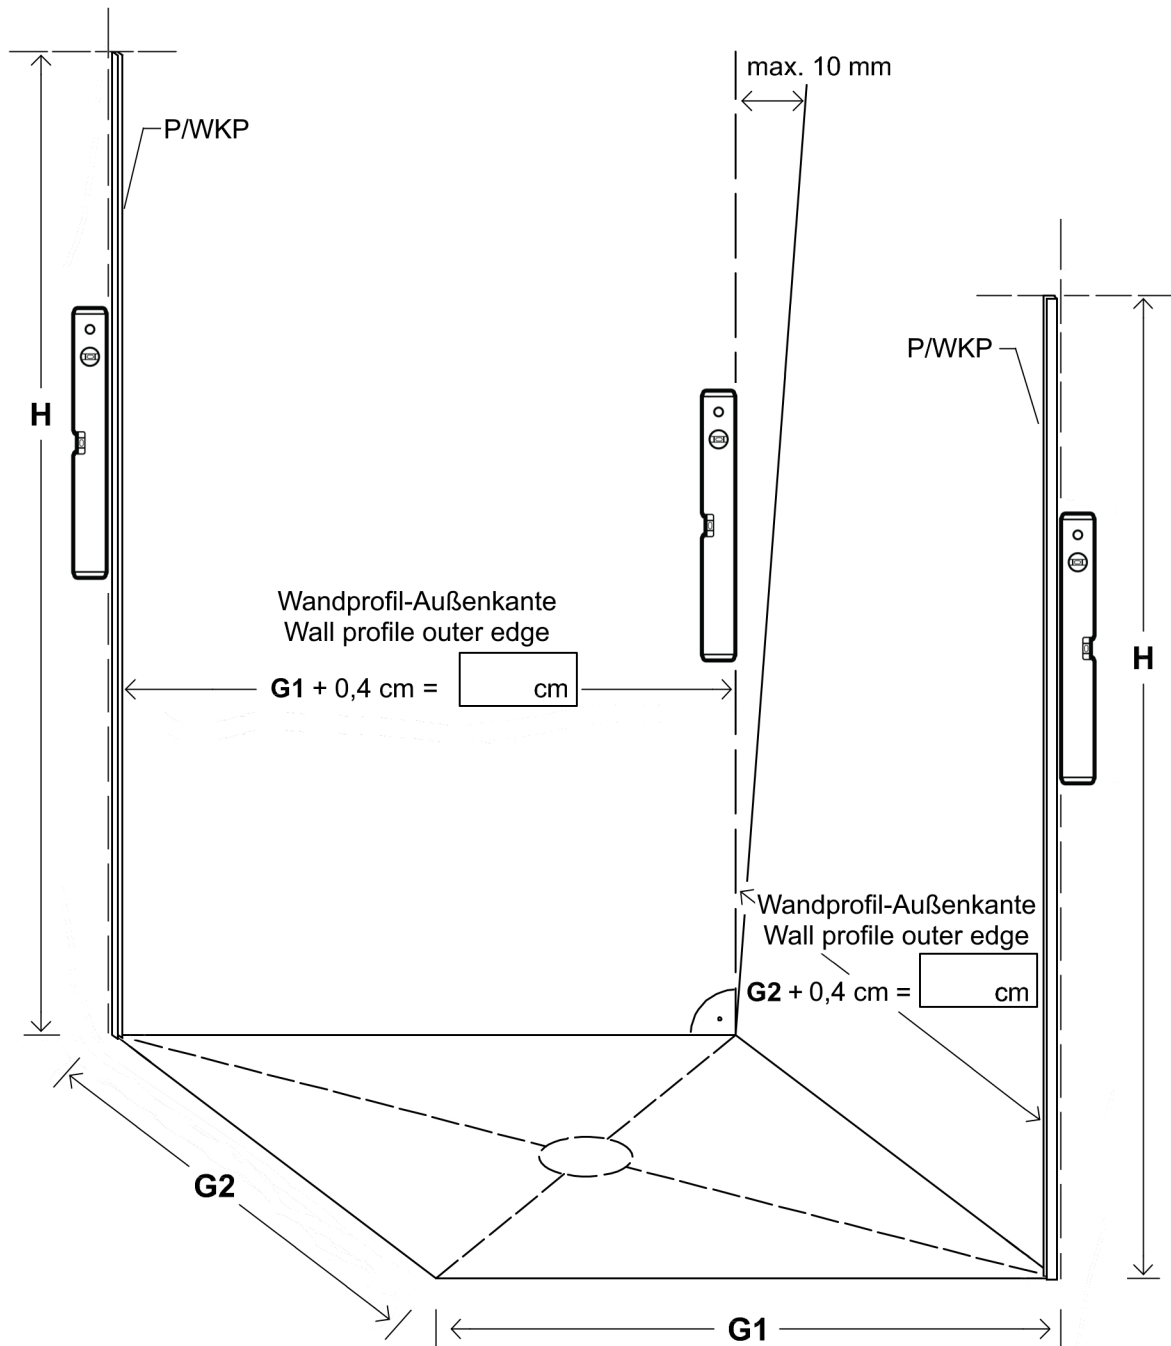

Diese Maße finden Sie in ihrem Auftrag:
You find this measures in your order:

H = Glas - Höhe
Glass height

G1, G2 = Glasaußenkante (unterer Wert des Verstellbereichs)
Outer edge of the glass (lower value of adjustment range)

Die Zeichnungen sind **nicht** Maßstabsgetreu.
The drawings are **not** to scale.